



TESTER HP 600 & 56 /57 / 58 /27 / 28

(Nails Bed Tester)

Light, portable and easy to work



FUNCTION MANUAL

Clean the electronic circuit and place the cartridge in the tester

CARTRIDGES HP 500 / 600 - 26 / 29 / 14 / 49 / 25 After put the cartridge in the tester, it must light all green and red central leds. The 6 leds (DNA) placed below the hole of cartridge place must light of following form:

HPC6614D - OOOOOO

HP51629A - OOOOOO

HP51626A - OOOOOO

HP51625A - OOXXXX

HP51649A - OOXXXX

CARTRIDGES HP 56 / 57 / 58 / 27 / 28 After put the cartridge in the tester, press the button and we have all the red leds on. In black cartridges we have also all the white leds on. This tester does not verify the (DNA).

For further information please contact our commercial department:

Tel. 00351 21 232 84 00 / 26 * Fax. 00351 21 232 84 90 * Email. info@iberlaser.net

All the marks and references are used only as identification.
Being marks registered by her holders, resign any right about them.